New Hampshire Volunteer Lake Assessment Program

2003 Biennial Report for Rockwood Pond Fitzwilliam



NHDES Water Division Watershed Management Bureau 29 Hazen Drive Concord, NH 03301



Observations & Recommendations

After reviewing data collected from **ROCKWOOD POND**, **FITZWILLIAM**, the program coordinators have made the following observations and recommendations:

We would like to congratulate your group on sampling twice this season! However, we would like to continue to encourage your group to conduct more sampling events in the future. Typically we recommend that monitoring groups sample three times per summer (once in June, July, and August). We understand that the number of sampling events you decide to conduct per summer will depend upon volunteer availability, and your monitoring group's water monitoring goals and funding availability. However, with a limited amount of data it is difficult to determine accurate and representative water quality trends. Since weather patterns and activity in the watershed can change throughout the summer, from year to year, and even from hour to hour during a rain event, it is a good idea to sample the pond at least once per month over the course of the season.

As you are aware, the Franklin Pierce College (FPC) satellite VLAP laboratory was not able analyze samples during the 2003 sampling season. This was largely due to personnel and budget issues at the college. Although the FPC laboratory was not able to analyze samples, staff at FPC continued to lend out sampling equipment to volunteer monitors in this areas. This was truly a cooperative effort between DES, FPC, and the volunteer monitors in this region. We want to thank you again for bearing with us this season. Also, we want to assure you that DES and FPC are working together to get the FPC lab up and running for the 2004 sampling season. We will keep you posted on the status of the laboratory as the sampling season approaches.

Please contact the VLAP Coordinator early this spring to schedule the annual DES lake visit. It would best to schedule the DES visit for early June to refresh your sampling skills!

Finally, please remember that one of your most important responsibilities as a volunteer monitor is to educate your association, community, and town officials about the quality of your pond and what can be done to protect it!

FIGURE INTERPRETATION

Figure 1 and Table 1: The graphs in Figure 1 (Appendix A) show the historical and current year chlorophyll-a concentration in the water column. Table 1 (Appendix B) lists the maximum, minimum, and mean concentration for each sampling season that the pond has been monitored through the program.

Chlorophyll-a, a pigment naturally found in plants, is an indicator of the algal abundance. Because algae are usually microscopic plants that contain chlorophyll-a, and are naturally found in lake ecosystems, the chlorophyll-a concentration measured in the water gives an estimation of the algal concentration or lake productivity. The mean (average) summer chlorophyll-a concentration for New Hampshire's lakes and ponds is 7.02 mg/m³.

The current year data (the top graph) show that the chlorophyll-a concentration in June was *less than* the state mean.

The bottom graph shows historical annual mean chlorophyll-a concentration.

Overall, visual inspection of the historical data trend line (the bottom graph) shows *a decreasing* in-lake chlorophyll-a trend, meaning that the concentration has *improved* since monitoring began in 1994. However, this is based upon limited data, as the lake was not sampled from 1996 – 2000. After 10 consecutive years of sample collection, we will be able to conduct a statistical analysis of the historic data to objectively determine if there has been a significant change in the annual mean chlorophyll-a concentration since monitoring began.

While algae are naturally present in all lakes/ponds, an excessive or increasing amount of any type is not welcomed. In freshwater lakes/ponds, phosphorus is the nutrient that algae depend upon for growth. Algal concentrations may increase with an increase in nonpoint sources of phosphorus loading from the watershed, or inlake sources of phosphorus loading (such as phosphorus releases from the sediments). Therefore, it is extremely important for volunteer monitors to continually educate residents about how

activities within the watershed can affect phosphorus loading and pond quality.

Figure 2 and Table 3: The graphs in Figure 2 (Appendix A) show historical and current year data for pond transparency. Table 3 (Appendix B) lists the maximum, minimum and mean transparency data for each sampling season that the pond has been monitored through the program.

Volunteer monitors use the Secchi-disk, a 20 cm disk with alternating black and white quadrants, to measure water clarity (how far a person can see into the water). Transparency, a measure of water clarity, can be affected by the amount of algae and sediment from erosion, as well as the natural colors of the water. The mean (average) summer transparency for New Hampshire's lakes and ponds is 3.7 meters.

The current year data (the top graph) show that the in-lake transparency **remained stable** from June to July. The transparency in both months was **greater than** the state mean.

The bottom graph shows historical annual mean transparencies. In 2003, the mean transparency is *greater than* the state mean.

Overall, visual inspection of the historical data trend line (the bottom graph) shows **a stable** trend for in-lake transparency, meaning that the transparency has **remained approximately the same** since monitoring began. After 10 consecutive years of sample collection, we will be able to conduct a statistical analysis of the historic data to objectively determine if there has been a significant change in the annual mean transparency since monitoring began.

Typically, high intensity rainfall causes erosion of sediments into lakes/ponds and streams, thus decreasing clarity. Efforts should continually be made to stabilize stream banks, pond shorelines, disturbed soils within the watershed, and especially dirt roads located immediately adjacent to the edge of tributaries and the pond. Guides to Best Management Practices designed to reduce, and possibly even eliminate, nonpoint source pollutants, such as sediment loading, are available from DES upon request.

Figure 3 and Table 8: The graphs in Figure 3 (Appendix A) show the amounts of phosphorus in the epilimnion (the upper layer) and the hypolimnion (the lower layer); the inset graphs show current year data. Table 8 (Appendix B) lists the annual maximum, minimum,

and median concentration for each deep spot layer and each tributary since the pond has joined the program.

Phosphorus is the limiting nutrient for plant and algae growth in New Hampshire's freshwater lakes and ponds. Too much phosphorus in a pond can lead to increases in plant and algal growth over time. The median summer total phosphorus concentration in the epilimnion (upper layer) of New Hampshire's lakes and ponds is 11 ug/L. The median summer phosphorus concentration in the hypolimnion (lower layer) is 14 ug/L.

The current year data for the epilimnion (the top inset graph) show that the phosphorus concentration *increased* from June to July. The phosphorus concentration in June was *less than* the state median while the concentration in July was *greater than* the state median.

The top graph shows historical annual mean epilimnetic phosphorus concentrations. In 2003, the mean epilimnetic phosphorus concentration is **approximately equal to** the state median.

The current year data for the hypolimnion (the bottom inset graph) show that the phosphorus concentration *increased* from June to July. The phosphorus concentration in June was *approximately equal to* the state median while the concentration in July was *greater than* the state median.

The bottom graph shows historical annual mean hypolimnetic phosphorus concentrations. In 2003, the mean hypolimnetic phosphorus concentration is *greater than* the state median.

Overall, visual inspection of the historical data trend line for the epilimnion show **a** stable phosphorus trend, which means that the concentration has **remained approximately the same** in the epilimnion since monitoring began.

Overall, visual inspection of the historical data trend line for the hypolimnion shows **a** stable phosphorus trend, which means that the concentration has **remained approximately the same** in the hypolimnion since monitoring began.

After 10 consecutive years of sample collection, we will be able to conduct a statistical analysis of the historic data to objectively determine if there has been a significant change in the annual mean phosphorus concentration since monitoring began.

One of the most important approaches to reducing phosphorus loading to a waterbody is to continually educate watershed residents about its sources and how excessive amounts can adversely impact the ecology and value of lakes and ponds. Phosphorus sources within a lake or pond's watershed typically include septic systems, animal waste, lawn fertilizer, road and construction erosion, and natural wetlands.

TABLE INTERPRETATION

> Table 2: Phytoplankton

Table 2 (Appendix B) lists the current and historic phytoplankton species observed in the pond. The dominant phytoplankton species observed this year were *Mallomonas* (a golden-brown), *Dinobryon* (a golden-brown), and Peridinium (a dinoflagellate).

Phytoplankton populations undergo a natural succession during the growing season (Please refer to the "Biological Monitoring Parameters" section of this report for a more detailed explanation regarding seasonal plankton succession). Diatoms and golden-brown algae are typical in New Hampshire's less productive lakes and ponds.

An overabundance of cyanobacteria (blue-green algae) indicates that there may be an excessive total phosphorus concentration in the pond, or that the ecology is out of balance. Some species of cyanobacteria can be toxic to livestock, pets, wildlife, and humans. (Please refer to the "Biological Monitoring Parameters" section of this report for a more detailed explanation regarding cyanobacteria).

Residents should observe the pond in September and October during the time of fall turnover (lake mixing) to document any algal blooms that may occur. Cyanobacteria (blue-green algae) have the ability to regulate their depth in the water column by producing or releasing gas from vesicles. However, occasionally lake mixing can affect their buoyancy and cause them to rise to the surface and bloom. Wind and currents tend to "pile" cyanobacteria into scums that accumulate in one section of the pond. If a fall bloom occurs, please contact the VLAP Coordinator.

> Table 4: pH

Table 4 (Appendix B) presents the in-lake and tributary current year and historical pH data.

pH is measured on a logarithmic scale of 0 (acidic) to 14 (basic). pH is important to the survival and reproduction of fish and other aquatic life. A pH below 5.5 severely limits the growth and

reproduction of fish. A pH between 6.5 and 7.0 is ideal for fish. The mean pH value for the epilimnion (upper layer) in New Hampshire's lakes and ponds is **6.5**, which indicates that the surface waters in state are slightly acidic. For a more detailed explanation regarding pH, please refer to the "Chemical Monitoring Parameters" section of this report.

The mean pH at the deep spot this season ranged from **5.46** in the hypolimnion to **6.05** in the epilimnion, which means that the water is **slightly acidic.**

Due to the presence of granite bedrock in the state and the deposition of acid rain, there is not much that can be done to effectively increase pond pH.

> Table 5: Acid Neutralizing Capacity

Table 5 (Appendix B) presents the current year and historic epilimnetic ANC for each year the pond has been monitored through VLAP.

Buffering capacity or ANC describes the ability of a solution to resist changes in pH by neutralizing the acidic input to the lake. The mean ANC value for New Hampshire's lakes and ponds is **6.7 mg/L**, which indicates that many lakes and ponds in the state are "highly sensitive" to acidic inputs. For a more detailed explanation, please refer to the "Chemical Monitoring Parameters" section of this report.

The Acid Neutralizing Capacity (ANC) of the epilimnion (the upper layer) continues to remain **much less than** the state mean of **6.7 mg/L**. Specifically, the pond is classified by DES as **acidified** and is **critically sensitive** to acidic inputs (such as acid precipitation).

> Table 6: Conductivity

Table 6 (Appendix B) presents the current and historic conductivity values for tributaries and in-lake data. Conductivity is the numerical expression of the ability of water to carry an electric current. The mean conductivity value for New Hampshire's lakes and ponds is **62.1 uMhos/cm**. For a more detailed explanation, please refer to the "Chemical Monitoring Parameters" section of this report.

The conductivity in the pond is relatively **low** and **less than** the state mean. Typically conductivity levels greater than 100 uMhos/cm indicate the influence of human activities on surface water quality. These activities include septic system leachate, agricultural runoff, iron deposits, and road runoff (which contains road salt during the spring snow melt). The low conductivity level in the pond is an

indication of the low amount of pollutants in the watershed. We hope this trend continues!

> Table 8: Total Phosphorus

Table 8 (Appendix B) presents the current year and historic total phosphorus data for in-lake and tributary stations. Phosphorus is the nutrient that limits the algae's ability to grow and reproduce. Please refer to the "Chemical Monitoring Parameters" section of this report for a more detailed explanation.

> Table 9 and Table 10: Dissolved Oxygen and Temperature Data

Table 9 (Appendix B) shows the dissolved oxygen/temperature profile(s) for the 2003 sampling season. Table 10 (Appendix B) shows the historical and current year dissolved oxygen concentration in the hypolimnion (lower layer). The presence of dissolved oxygen is vital to fish and amphibians in the water column and also to bottom-dwelling organisms. Please refer to the "Chemical Monitoring Parameters" section of this report for a more detailed explanation.

The dissolved oxygen concentration was *high* at most depths sampled at the deep spot of the pond. Typically, shallow lakes and ponds that are not deep enough to stratify into more than one or two layers will have relatively high amounts of oxygen at all depths. This is due to continual lake mixing and diffusion of oxygen into the bottom waters induced by wind and wave action.

> Table 11: Turbidity

Table 11 (Appendix B) lists the current year and historic data for inlake and tributary turbidity. Turbidity in the water is caused by suspended matter, such as clay, silt, and algae. Water clarity is strongly influenced by turbidity. Please refer to the "Other Monitoring Parameters" section of this report for a more detailed explanation.

DATA QUALITY ASSURANCE AND CONTROL

Annual Assessment Audit:

During the annual visit to your pond, the biologist conducted a "Sampling Procedures Assessment Audit" for your monitoring group. Specifically, the biologist observed the performance of your monitoring group while sampling and filled out an assessment audit sheet to document the ability of the volunteer monitors to follow the proper field sampling procedures (as outlined in the VLAP Monitor's Field Manual).

This assessment is used to identify any aspects of sample collection in which volunteer monitors are not following the proper procedures, and also provides an opportunity for the biologist to retrain the volunteer monitors as necessary. This will ultimately ensure that the samples that the volunteer monitors collect are truly representative of actual lake and tributary conditions.

Overall, your monitoring group did an **excellent** job collecting samples on the annual biologist visit this season!

Since the 2004 sampling season will be your particular group's second year sampling, please refer to the following helpful hints for a few aspects regarding sample collection:

- > Finding the deep spot: Please remember to locate the deep spot using three reference points from the shoreline. This method is known as triangulation. In addition, depth finders and Global Positioning System (GPS) technology may be used to further pinpoint the location of the deep spot. In addition, please remember to check the depth of the deep spot by sounding to ensure that you have actually located the deepest spot. To sound the bottom, simply fill the Kemmerer bottle with lake water from the surface and then lower the bottle into the lake until you feel it touch the bottom. When you have reached the bottom, check the depth on the calibrated chain. You may need to move to another location and repeat this procedure a few times until the deepest spot is located. When you have found the deep spot, please remember to write the depth of the field data sheet. Sounding may disturb the sediment, so please allow the bottom to settle out before collecting the deepest sample.
- > Anchoring at deep spot: Please remember to use an anchor with sufficient weight and sufficient amount of rope to prevent the boat from drifting while sampling at the deep spot. It is difficult for the biologist to collect an accurate and representative dissolved oxygen/temperature profile when the boat is drifting. In addition, it is difficult to view the Secchi disk and collect samples from the proper depths when the boat is drifting. Depending on the depth of the lake and the wind conditions, it may be necessary to use two anchors!
- ➤ Hypolimnion (lower layer) sample collection: Always remember to allow the lake bottom to settle after you sound the bottom before collecting the hypolimnion (lower layer) sample. In addition, please be careful not to hit the lake bottom and make sure that there is no sediment in the Kemmerer bottle before filling the sample bottles. When the lake bottom is disturbed, sediment, which typically contains attached phosphorus, is released into the water column.
- > Secchi disk readings: When measuring the transparency at the deep spot, please remember to take at least two Secchi disk readings.

Since the depth to which the Secchi disk can be seen in the water column can vary depending on how windy or sunny it is, and also on the eyesight of the volunteer monitor, it is best to have at least two people take a reading. In addition, please make sure that the readings are taken on the shady, non-windy side of the boat, between the hours of 10 am and 2 pm.

- ➤ **Chlorophyll-a Sampling:** When collecting the chlorophyll-a sample using the **composite method**, please make sure to collect one Kemmerer bottle full of water at each meter from the starting point up to 1 meter from the surface. Specifically, in lakes with one or two thermal layers, begin at 2/3 the total depth and collect water at every meter up to the surface. In lakes with three layers, start at the middle of the middle layer (metalimnion) and collect water at every meter up to the surface.
- ➤ Chlorophyll-a Sampling: When collecting the chlorophyll-a sample using the integrated tube method, please make sure to lower both the weighted end and chain to the appropriate sample depth. Specifically, in lakes with one or two thermal layers, lower the weighted end and chain to 2/3 the total depth. In lakes with three layers, lower the weighted end and the chain to the middle of the middle layer (metalimnion). Crimp the end of the tube tightly and haul the weighted end up by the chain only. Lift the uncrimped end above your head so the open end is always higher than the water level in the tube to ensure that the sample does not escape out of the top of the tube.
- ➤ **Tributary Sampling:** Please do not sample tributaries that are not flowing. Due to the lack of flushing, stagnant water typically contains elevated amounts of chemical and biological constituents that will lead to erroneous results.
- ➤ **Tributary Sampling:** Please do not sample tributaries that are too shallow to collect a "clean" sample (i.e.; free from sediment and organic debris). You may need to move upstream or downstream to collect a "clean" sample. If the stream is not deep enough and the bottom sediment is disturbed while sampling, the phosphorus concentration in the sample will likely be elevated.

In addition, please do not sample tributaries if the bottom sediment has been disturbed as this will likely result in an elevated phosphorus concentration. If you disturb the stream bottom while sampling, please rinse out the bottle and move to an upstream location so that you can sample in an undisturbed area.

Sample Receipt Checklist:

Each time your monitoring group dropped off samples at the laboratory this summer, the laboratory staff completed a sample receipt checklist to assess and document if the volunteer monitors followed proper sampling techniques when collecting the samples. The purpose of the sample receipt checklist is to minimize, and hopefully eliminate, future reoccurrences of improper sampling techniques.

Overall, the sample receipt checklist showed that your monitoring group did an *excellent* job when collecting samples and submitting them to the laboratory this season! Specifically, the members of your monitoring group followed the proper field sampling procedures and there was no need for the laboratory staff to contact your group with questions, and no samples were rejected for analysis.

NOTES

➤ Biologist's Note (6/16/03): Great water quality!

USEFUL RESOURCES

Best Management Practices to Control Nonpoint Source Pollution: A Guide for Citizens and Town Officials, NHDES-WD 97-8, NHDES Booklet, (603) 271-3503.

Erosion Control for Construction in the Protected Shoreland Buffer Zone, WD-SP-1, NHDES Fact Sheet, (603) 271-3503 or www.des.state.nh.us/factsheets/sp/sp-1.htm

Lake Protection Tips: Some Do's and Don'ts for Maintaining Healthy Lakes, WD-BB-9, NHDES Fact Sheet, (603) 271-3503 or www.des.state.nh.us/factsheets/bb/bb-9.htm.

Management of Canada Geese in Suburban Areas: A Guide to the Basics, Draft Report, NJ Department of Environmental Protection Division of Watershed Management, March 2001, www.state.nj.us/dep/watershedmgt/DOCS/BMP_DOCS/Goosedraft.pdf.

Proper Lawn Care In the Protected Shoreland, The Comprehensive Shoreland Protection Act, WD-SP-2, NHDES Fact Sheet, (603) 271-3503 or www.des.state.nh.us/factsheets/sp/sp-2.htm.

Sand Dumping - Beach Construction, WD-BB-15, NHDES Fact Sheet, (603) 271-3503 or www.des.state.nh.us/factsheets/bb/bb-15.htm.


Weed Watchers: An Association to Halt the Spread of Exotic Aquatic Plants, WD-BB-4, NHDES Fact Sheet, (603) 271-3503 or www.des.state.nh.us/factsheets/bb/bb-4.htm.


APPENDIX A

GRAPHS

Rockwood Pond, Fitzwilliam

Figure 1. Monthly and Historical Chlorophyll-a Results

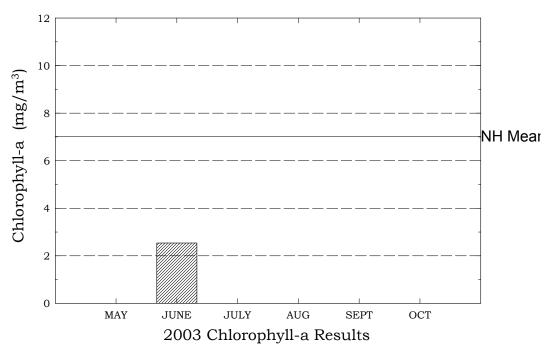

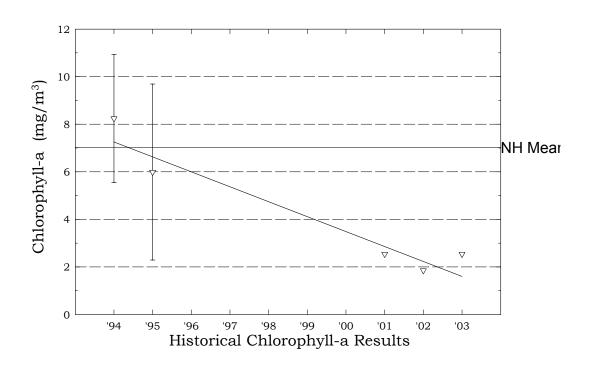

Rockwood Pond, Fitzwilliam

